

2170 S. Towne Centre Place, Suite 100 Anaheim, CA 92806 (714) 254-3410 Fax: (469) 621-5602

DISCOUNT PRICE DEADLINE DATE MARCH 5, 2020

INCLUDE THE FREEMAN METHOD OF PAYMENT FORM WITH YOUR ORDER

COMPANY NAME:			BOOTH #:	ВО	OTH SIZE:	X								
CONTACT NAME:			PHONE #:											
E-MAIL ADDRESS:														
For Assistance, ple	ase call (714) 254-34	110 to speak with one of our												
EL EGERIOAL OL	ITI ETO (Devolute Dei	For, fast, easy orderi	ng, go to www.freema	an.com										
ELECTRICAL OU	TLETS (Double Pric	e for 24 Hour Service)												
LABOR RATES 8	SCHEDULE:													
Straight Time -	Monday - Frida	ay, 8:00 am - 4:30 pm (Ex	ccluding Holidays))										
Overtime -	Monday - Frid	ay, 4:30 pm - 8:00 am an	d all day Saturday	•	•									
Description				Adva Pri		w Site rice								
				•	- •									
					•	0.75								
•	•													
All lifts require	lahor to operate a	nd a ground person in o	order to meet sat	oty standards										
_	-	nt 50% of the total instal		_	nour.									
	applies to all labor on teed only at start of	orders placed at show site.												
Review the list of	work below to dete	rmine if electrical labor is												
		or I & D houses as it falls u ervice desk to confirm tha			nd material ch	arges								
					wing nogo									
Note. Fo	Timore imormation	and an example of a comp	leted Hoorplan pie	ase see the folio	willy page.									
FLOOR WORK:			BOOTH WORK	:										
Floor work is the d flooring.	istribution of electrica	I under carpet and	I — '	of the following.										
_	TER MITHOUT EVIII	DITOR RESENT	Distribution of electrical overhead (more than one drop location in your booth).											
	EED WITHOUT EXHI Date Tin		☐ Distribution of electrical through booth structure.											
Work is completed	prior to your arrival.	Freeman must receive	Lighting requirements of 2000w or greater require labor to balance & distribute.											
		r distribution under carpet.	Connection or hard wiring of all exhibitor equipment.											
PRINT NAME:		 	☐ Lighting used as spot or flood lights.☐ Assembly and installation of all lighting from truss or beams.											
AUTHORIZED SIG	SNATURE:		☐ Wiring of over		ngnang nom at	doo or boarno.								
☐ EXHIBITOR SI	UPERVISION (DO NO	OT PROCEED)	☐ Installation of electrical headers and/or light boxes. ☐ Other											
<u> </u>	JI LIVIOION (BO IV	<u> </u>	l m Ottlei											
LABOR REQUES	г			SELECT WO	RK TYPE									
Date	Time	# Electrician	Est. # Hours	Floor Work_	Booth W	/ork								
Date	Time	# Electrician	Est. # Hours	Floor Work_	Booth W	/ork								
Date	Time	# Electrician	Est. # Hours	Floor Work_	Booth W	/ork								
Date	Time	Est. # Hours	Lift Type											
Date	Time	Est. # Hours	Lift Type											
NAME OF ON-SIT	E CONTACT:													
Special Instructions														

NAME OF SHOW: AORN GLOBAL SURGICAL CONFERENCE & EXPO 2020 / MARCH 29 - 31, 2020

ELECTRICAL INSTRUCTIONS

- 1 Labor rates are based on current wage scales and are subject to change in the event of a wage increase after rates have been published.
- 2 A minimum charge of one hour is applicable to all labor requests. Additional time on the same day is billed in 1/2 hour increments. Continuations to another day are a minimum of 1 hour.
- 3 Labor must be picked up at the Freeman service desk. Charges for labor commence at time of dispatch to service the labor call.

 A one hour minimum will apply if an exhibitor representative is not present at the time of call or reschedules the call, unless 24 hour advance notice is received in writing.
- 4 Labor charges will include the time for electricians to gather the necessary tools and material for the job, have their work checked by the client and return the tools and material to the supply area.
- 5 Exhibitors may supply their own 14 gauge 3 wire, extension cords and/or power strips, both of which must be grounded and UL approved.


CANCELLATION POLICY

A 50% refund will be applied to electrical outlets cancelled after installation. Refunds will not be issued for materials and/or labor charges related to the installation.

EXAMPLE OF PLAN AND INFORMATION REQUIRED TO COMPLETE FLOORWORK

Please indicate the following on the floor plan.

- Location and load of main power dropplease provide specific dimensions and wattages/amperages.
- 2. Location and load of all outlets please provide specific dimensions and wattage, amperage and voltage.
- 3. Booth orientation please provide surrounding aisle and/or booth numbers.

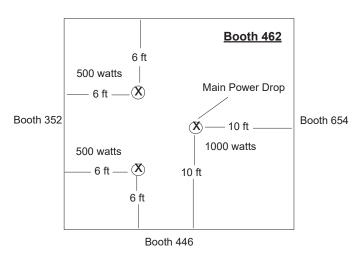

ELECTRICAL SERVICES

From under carpet wiring to overhead lighting, Freeman has the power to simplify your electrical needs and installation. We've answered your most common questions below to help you place your order or prepare for a detailed discussion. Whether you require basic household/office power or a more technical installation for equipment, audio-visual presentations or truss lights, our electrical specialists and qualified electricians are always available to assist you.

How do I know how much power I need?

First, review a layout of your exhibit, noting all of the items in it that require power. Consider lighting, computer equipment, and your own product. Are you bringing or renting any a/v equipment or ordering catering services that might need power? Will you be using a lead retrieval machine? If it's an item that plugs into a standard wall outlet found in a home or office (in North America), it will require 110/120 volt power. 208 or 480 volt power is generally used for machinery or industrial cooking devices and is ordered by single or 3 phase.

Next, mark the voltage and wattage or amperage (referred to as "load") (100 watts = 1 amp) of each piece of equipment at it's location in the booth. This information should be provided on a name plate or stamp usually located on the back or bottom of the equipment. If not indicated, check our accompanying electrical usage guide for estimated wattages for common items used at trade shows or call your rental company/ caterer for specifics. For lighting, loads are dictated by the wattage of the bulbs. Arm lights included with Freeman exhibit packages use 200 watt bulbs. Keep in mind that you need to order power for any lighting within your booth unless the lights are ordered directly from the Electrical Department (those listed on the Freeman electrical order form).

Finally, total the wattage for the 120 volt devices in each area and select an outlet that meets or exceeds that total. Separate outlets should be ordered for each piece of equipment and/or each power location to help minimize tripping/power outages. It is always safer to slightly overestimate your power requirements. Wattage or amperages cannot be combined for 208 or 480 volt apparatus. Please order separate outlets for each.

Do I need to order labor?

As the official service contractor, electrical installations must be performed by Freeman union labor. Labor is required for any electrical work over and above the delivery of outlets to the back wall of inline booths. Labor orders will automatically be input upon receipt of an electrical layout for under carpet installation (floor work) or to connect any 208 volt or higher services (hook up). Dismantle labor for electrical services is calculated at 50% of the installation time since much of the work is performed on a mass basis after booths are removed from the exhibit hall. Please see the electrical labor order form for further details, rules and regulations.

What is an electrical layout and why do I need one?

Like your own home, electrical boxes and wiring should not be visible once the exhibit is completed. At show site, they are the first things to be installed so that they can be hidden by drape, walls or counters and under flooring or carpet. Electricians, therefore, work on a blank slate. A good electrical layout or floor plan provides them with a simple overhead view of your booth indicating the locations and load of each electrical outlet and the orientation of your booth within the show itself. The layout should be to scale and provide specific measurements to each outlet along with surrounding aisle or booth numbers to ensure accuracy. For island booths, a main power location must also be indicated as it is the location from which other outlets are fed. Please see the sample layouts and electrical grid for further information.

When a layout and credit card are provided in advance, Freeman makes every effort to ensure that the floor work is completed before you arrive so that there is no delay in assembling your booth. Once carpet is laid, installing or changing electrical services becomes much more difficult and potentially costly.

Please note that layouts, complete with mandatory information, are required prior to the deadline date for electrical orders to be eligible for advance rates. Layouts are not required if all outlets are located at the back wall in inline booths.

Is the price for power per day?

Outlet or connection prices are typically for an entire show.

What is 24 hour power?

Many facilities these days are energy conscious and therefore turn off power overnight during show days. Power is turned off 1/2 hour after the show closes at the earliest and restored no later than 1/2 hour before the show opens the following day. 24 hour power is, as it sounds, power that is continuously on 24 hours per day.

If your booth includes, for example, refrigeration equipment, an aquarium or programmable apparatus that depends on uninterrupted power, you should consider ordering 24 hour service. Power is usually not turned off during move-in or move-out.

Where does the power come from?

Depending on the facility, the power can come from overhead catwalks, floor ports, columns, wall outlets or a combination of these sources. Check with the local Freeman branch office for more information.

Where will my power be located?

In-line and peninsula booths will find their main power source on the floor somewhere along the rear drape line of their booth. Island booths need to submit an electrical layout. Please see the sample layouts and electrical grid for further information.

What if I need power at another location besides the rear of my booth? What if I have multiple power locations?

Exhibitors requiring power at any location other than a back wall must submit an electrical layout. Please see the sample layouts and electrical grid for further information.

How many places will I have to plug in? How many things can I plug in?

For planning purposes, you should always assume that there is only one connection point per outlet ordered. Power strips can provide additional sockets but do not confuse having more places to plug in with additional power. For example – An order is placed for a 500 watt outlet. A track light with 4 – 100 watt bulbs is plugged in to a power strip connected to the outlet, using 400 of the 500 watts. Any lighting or equipment now plugged in to a second socket may not exceed 100 watts.

Also keep in mind that power strips are designed, for safety purposes, to trip at 1500 watts or 15 amps. Using a power strip with a 2000 watt (20 amp) outlet will reduce it to a 1500 watt outlet.

All orders exceeding 120 volt/20 amps provide one connection point only, cannot accommodate power strips and require labor for installation.

FREEMAN

Can I bring my own extension cords and power strips? (Also known as plug strips, multi strips, etc.)

Exhibitors may use their own extension cords and power strips under the following conditions:

- The equipment must be 3 wire, 14 gauge minimum with a ground.
- The extension cords must be flat if they are to be laid under carpet.
 (Labor is required to lay the cords.)
- All power strips must have circuit protection.

Can I run my extension cords under the carpet myself?

For safety reasons, exhibitors are not allowed to run any electrical wiring under any type of floor covering or where they may be concealed in the booth structure. The show's electrical contractor is liable for electrical installations and therefore must perform all floor or booth work.

Will my floor work be completed before I arrive?

Every attempt is made to have floor work completed prior to carpet installation if you have submitted the following:

- A completed electrical order form.
- A valid and authorized credit card to be kept on file for the company.
- An electrical layout indicating the main power location, dimensions to each power location, the power required at each location, and surrounding aisle or booth numbers to determine orientation of the booth.

Labor and material charges apply.

When will my power be turned on?

Power is only guaranteed to be installed before the show opens. If Freeman is allowed early access to the facility, power is normally ready the first day of move-in for exhibitors but any special requests such as temporary chain motor power, programming machinery or testing equipment should be noted on your order.

Do I need lighting?

Lighting can dramatically change the impact of an exhibit, no matter the size. Used effectively, lighting can emphasize specific areas of a booth or highlight products. Also, an exhibit will appear dark and uninviting if the surrounding booths are lit and yours is not.

Can I hang my own lights?

 10×10 booths with pop-up displays (a display that can be assembled in less than 30 minutes without tools) can hang their own lights and plug them in without ordering labor. Typically, exhibitors themselves can hang up to 4 lights as long as they require no more than 20 amps in total but it is best to clarify with the local branch. If a decorating company (including Freeman) has been contracted to install a display, electrical labor is required to install the lights. Due to union contracts, no other union is allowed to install electrical equipment.

Do I need to order power for my lighting?

Exhibitors ordering Electrical Services lighting (those listed on the Freeman electrical order form) do not need to order power. It is included in the rental. Exhibitors supplying their own lighting or renting lights need to order power. Labor may be required to hang the lights.

Do I need to order labor to plug in my lights or equipment?

Most 120 volt connections do not require labor. Exhibitors are welcome to plug in their own standard office devices. Labor is required for all 208 or 480 volt connections and if lights or equipment need wiring or if electrical cords are to be run under the carpet or in concealed areas to ensure that all electrical codes and building rules are met.

How can I save money and frustration when ordering electrical services?

Most importantly, be sure to submit your order before the discount price deadline date. If an electrical layout is needed, it also must be received, complete with mandatory information, before the deadline date to be eligible for discount pricing. Late orders can be subject up to a 50% increase in cost because of the behind-the-scenes planning required to distribute power.

Don't underestimate your power requirements and work within the local rules, regulations and union jurisdictions. They have been implemented to avoid problems. While it may seem simple to plug in lights and equipment, it is not uncommon for exhibit or non electrical staff to overload circuits. Trouble calls can become expensive when it takes time to find the source of a problem.

If unsure about labor, call us for direction and if necessary, place a "will call" order before the discount price deadline date. You will only incur a charge if labor is dispatched to your booth but you'll have secured the advance pricing. And, check in with the electrical or service desk as soon as you know you need labor, not at the time you want the electricians in your booth. It will help to avoid delays as we can schedule accordingly.

Lastly, try to resolve any disputes at show site. It is much easier to discuss electrical issues when both parties can physically review the installation.

Additional questions?

Call customer service at the number listed on the Quick Facts and ask for the Electrical Services Department. For fast, easy ordering, tools, and helpful hints go to www.freemanco.com/store.

FREEMAN

REEMAI

ELECTRICAL SERVICES USAGE GUIDE

The following wattages are approximate and are provided to help you estimate your power usage. To assist in estimating we recommend that you refer to the name plate or stamp usually located on the back or bottom of any electrical apparatus and order the corresponding outlet for each piece of equipment to avoid tripping/power outages during the event.

The formula for wattage is voltage x amperage (120 volt x 1 amp = 120 watts), 5 - 100 watt light bulbs = (5x100 = 500 watts)

	WATTAGE		WATTAGE
Blender	475-1000	Imprinter for T-Shirts	2000
Can Opener	500	Iron	700-1100
Card Reader (credit) / Lead Retrie	eval 100	Juicer - Single	500
Cash Register	100-200	Juicer - Double	1000
Coffee Pot - Household Size	600-1200	Laminator	2000
Coffee Pot - Large Brewer	1500-2000	Lights with Freeman Rental Booths	200 each
Computer - Monitor (independent)	120-200	Meat Slicer	500-1000
Computer - Desktop (monitor & C	PU) 200-900	Microwave Oven	500-2000
Computer - Laptop	100-300	Mixer	500-1000
Computer Printer - Dot Matrix	100-500	Photocopier dependent upon size - may	require 208 volt
Computer Printer - Laser	400-1000	Pizza Oven (small) 30amp/120 volt Spe	cial Connection
Crock Pot	200-1000	Popcorn Maker	2000
DVD Player	50-100	Projector (dependent upon size)	1000
Electric Frying Pan	1200-2000	Refrigerator - Small	400
Fax Machine	1000	Refrigerator - Full Size	750
Flat Screen TV - 32" to 50"	1000	Sewing Machine	1000
Food Processor	500-2000	Steamer	2000
Glue Gun	300	Stereo (amplifier)	100-500
Griddle	1500-2000	Television	100-500
Hair Dryer	1000-2000	Toaster	1000
Heat Lamps (per lamp)	250	Toaster Oven	1500
Heater (portable)	1500-2000	Vacuum Cleaner	1500
Hot Plate Single	1000	VCR	100
Hot Plate Double	1500-2000	Water Cooler - Cold Water	1000
Hot Water Heater 30amp/2	08 volt/Single Phase	Water Cooler - Hot/Cold Water	2000

FREEMAN

ELECTRICAL SERVICES

The grid below may be printed to layout your electrical requirements for booths up to 40 x 40 or used as a sample to develop your own plan for larger exhibits. Please complete as clearly as possible, indicating the following:

- 1. **Location of the main power drop**. Power needs to be distributed from one location at which a panel or other piece of electrical equipment will be installed. It is recommended that this equipment be placed in a closet, under a table/desk or in another location that keeps it out of sight. Please provide specific dimensions.
- 2. **Location and load of all outlets**. Please provide specific dimensions and wattages/amperages. *Please do not simply place an X where power is required.*
- 3. **Booth orientation**. Please provide surrounding aisle and/or booth numbers, particularly for island booths. Also, please try to orient your booth to the overall floor plan so that the diagram does not have to be rotated.

SHOW	HOW NAME														DATES																				
	COMPANY NAME														BOOTH #																				
Adjacent Aisle or Booth#																	_																		
																																	\exists		
																																	_		
																																	\dashv		
																																	\exists		
																																	\dashv		
																																	\exists		
1	H																																\dashv		₽
																																	\exists		djac
																																	\dashv		ent
																																	_		Adjacent Aisle or Booth#
Adjacent Aisle or Booth #	H																																\dashv		e or
Вос																																	\exists		Во
ō																																	\dashv		oth
isle																																	4		#
nt A	-																																\dashv		
ace																																	_		
Adj	-																																\dashv		
																																	_		
	-																																\dashv		
																																	_		
	H																																\dashv		
																					4		4	4	_								\dashv		
																							+	+									\dashv	=	
			T T																			t											\neg		


A measurement scale can be applied as necessary to reflect the size of your booth.

Adjacent Aisle or Booth #_

SAMPLE LAYOUTS


IN LINE BOOTHS

Power is run or dropped to in line booths along the back walls or drape line of multi booth sections. The "main power locations" therefore are always located at the back of in line and peninsula booths. Outlets may not be in the exact center of the back wall. 120 volt outlets are shared by back to back booths. Example: Outlet =

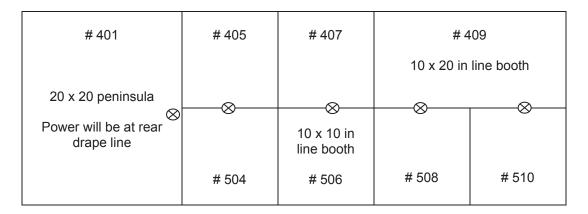


Electrical layouts are required whenever an outlet is needed at any other location within the booth except for the back wall. Exact measurements and/or comments that clearly indicate outlet locations **must be included**. Examples based on above floor plan:

20 x 20 Peninsula – Booth # 401 Order = 2-10 amp, 1-20 amp outlets

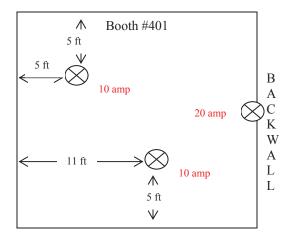

10 x 20 In Line – Booth # 409 Order = 2 x 5 amp outlets

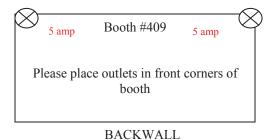

ISLAND BOOTHS

Electrical layouts are always required for island booths and **must include** the following information:

1. Main Drop.

Since there is no back wall in an island, the exhibitor supplies the location of the main drop, whether one or multiple outlets are ordered. When it will be the point from which power will be distributed to other outlets in the booth, a panel or other piece of electrical equipment (no larger than? x? x?) will be installed at the main drop. For this reason, it is recommended that main drops be located in a closet, under a table/desk or in another area that keeps it out of sight. Measurements must be provided to the main drop.


2. Location and load of all outlets.


Again, dimensions must be provided to all satellite outlets along with the load of each outlet. It is best to indicate voltage, phase and amperage for all outlets once an order exceeds 120 volt service.

3. Booth orientation.


Providing reference points such as surrounding aisle and/or booth numbers defines how an island booth is oriented to the overall show floor plan. In other words, which side is which? It is best to draw your layout relative to the show floor plan so that both are facing the same direction. Examples:

Section of show floor plan

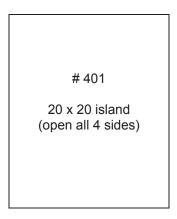

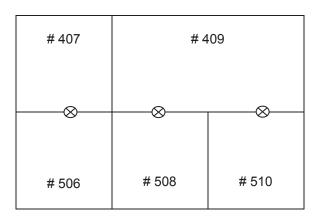

20 x 20 Island – Booth # 401 Order = 1 x 208 volt, 3 phase, 10 amp + 120 volt, 2 x 20 amp + 2 x 5 amp outlets

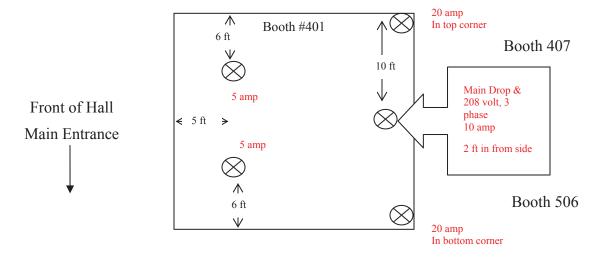



2170 S. Towne Centre Place, Suite 100 Anaheim, CA 92806 (714) 254-3410 Fax: (469) 621-5602

DISCOUNT PRICE DEADLINE DATE MARCH 5, 2020

INCLUDE THE FREEMAN METHOD OF PAYMENT FORM WITH YOUR ORDER

NAME OF SHOW: AC	ORN GLO	BAL SUR	GICAL (CONFEREN	NCE & EXP	PO 2020 / MAR	CH 29 - 31, 2020								
COMPANY NAME:				ВООТН #:	Х										
CONTACT NAME:						PHONE #:									
E-MAIL ADDRESS:															
For Assistance, pleas	e call (714) 254-3410	to speak	with one of c	our experts.										
	`	,	•		<u> </u>	www.freeman.com									
ELECTRICAL OUTL	ETS (Dou	ble Price fo													
Power includes deliver					e booth in		ADDITIONAL INCODE	MATION							
peninsula and inline bo	oths. Pleas	se see the El	ectrical La	abor order for	m for rates		ADDITIONAL INFORI								
and instructions if you items to hang or erect,	have order					Your order w	FOR ADVANCE PAYMEN with full payment along with								
electrical requirements	5.					main power	location and distribution po be received prior t								
110/120 VOLT	0	0	D:		,		DEADLINE DATE (MARCH 5, 2020	OF:							
	Quantity (For Show	Quantity (For 24 hrs/day	Discou	nt Standar	d		WARCH 5, 2020								
	Hours Only)		D .1	B.4	T0T41	MULTIPL	E OUTLET LOCATIONS	/ ISLAND BOOTHS							
	<u>Show</u>	<u>24 Hr.</u>	<u>Price</u>	<u>Price</u>	TOTAL	locations and	or plan is required for ord d/or island booths. Detailed								
500 Watts (5 amps)			159.25		\$	on the follow	ving page. If a power local is not provided prior to sh	tion or main drop in ar							
1000 Watts (10 amps) 2000 Watts (20 amps)			275.50 369.25		\$	will be deter	mined by Freeman in ord	ler to maintain delivery							
,					\$	schedules. F	Relocation of the service wi and material basi								
208 VOLT SINGLE F	PHASE (La	abor Requi	red for C	onnection)											
20 Amps				1,051.15 =			ISLAND BOOTH								
30 Amps				1,261.50 =		minimum ins	ooths with no labor ordere tallation charge and a 1/2 h	our minimum dismantle							
60 Amps				1,648.90 =			charge.								
100 Amps				2,178.00 =			INLINE AND PENINSULA	BOOTHS							
200 Amps			2,218.50	3,327.75 =	\$		e placed in the back of the								
208 VOLT THREE P	HASE (La	bor Requir	ed for Co	onnection)			specified.								
20 Amps			928.50	1,392.75 =	\$	_	24 HOUR SERVIC	ES							
30 Amps				1,674.40 =		If an uninterr	ninterrupted power supply is required for the full duri show, please order 24 hour power. Electricity is turne								
60 Amps				2,186.25 =		30 minutes p	e show, please order 24 hour power. Electricity is turned inutes prior to show opening and turned off 30 minutes aff v closes on show days. Power will be turned off immediate final show closing. If you require power outside actu								
100 Amps				2,894.25 =		after final sh									
200 Amps				4,302.40 =		show hours,	special arrangements shou Additional charges may	ıld be made in advance v apply.							
400 Amps				5,847.40 =											
Transformer to Boost 2			•		,		SEPARATE OUTLE								
	Qty of Am	ps	_X Price \$	S =	= \$	Separate out	tlets should be ordered for e and/or each power loo								
480 VOLT THREE P	HASE (La	bor Requir	ed for Co	onnection)											
20 Amps			1,095.25	1,642.90 =	: \$	Show si	HANGING SIGN te prices will apply if your I								
30 Amps				1,968.75 =		received in a	advance at the warehouse	prior to the warehouse							
60 Amps				2,580.75 =			shipping deadline d	ate.							
100 Amps				3,407.25 =			CANCELLATION	N							
200 Amps			3,344.25	5,016.40 =	\$		nd will be applied to electr tion. Refunds will not be is	rical services cancelled							
LIGHTING (Price In	ncludes Po	wer Consu	umed)***	ŧ			labor charges related to th								
Single Light Stand (200w	′)**		163.00	244.50 =	\$										
Double Light Stand (400v	N)**		268.50	402.75 =	\$	If you require	OVERHEAD POW e your power from overhea								
Arm Light***			200.25		\$	and	d labor may be incurred. P FreemanAnaheimES@free	lease contact							
Overhead Quartz Light*			528.25	792.40 =	\$										
* May require labor and FreemanAnaheimES(Outlet/s	TOTAL COST								
** For single or double li- inline booth. Placeme				•		Outlet(s									
*** Requires a hard wall				o. and mak		Lighting									
Extension cords and pow			r rental at t	he Freeman S	ervice Desk	7.75% T	ax (Lighting only) \$								
****Applicable sales tax a					200	GRAND	TOTAL \$								

GRAND TOTAL

ELECTRICAL INSTRUCTIONS

HOW TO DETERMINE ELECTRICAL REQUIREMENTS

For Equipment

All electrical equipment is stamped or labeled with electrical ratings usually found on the back or bottom of the equipment. Verify voltage and either amperage or wattage from the information provided. Standard office and household items operate on 110/120 volt power. Machinery and equipment typically require 208 or 480 volt power.


For Lighting

Verify the wattage of the bulbs in the lights and multiply by the number of bulbs/lights.

LOCATION OF POWER IN YOUR BOOTH

In-Line and Peninsula Booths

Power will be installed in one location, typically on the floor somewhere along the back of the booth, as indicated in the following diagrams: (We cannot guarantee that the outlet will be specifically located in the middle.)

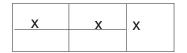




IN-LINE BOOTHS / PENINSULA

BACK TO BACK PENINSULA


If power is required in locations other than indicated above, secondary distribution will be required and billed on a time and material basis. Please complete and submit an Electrical Labor Order Form with your power order, along with a floor plan as described below.

Island Booths/Multiple Outlets

Floor plans are always required for Island Booths and orders for multiple outlet locations. The floor plan must indicate booth dimensions, surrounding booth numbers for orientation within the facility, each outlet location, required wattage or amperage and location for main drop. If power location in an island booth is not provided prior to show move-in, a location will be determined by Freeman in order to maintain delivery schedules. Relocation of the service will be charged on a time and material basis. See examples below: A grid is available at freemanco.com to print as a base layout.

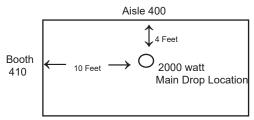

Island Booth with one outlet

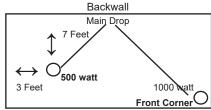

10 X 20 Booth with multiple outlets Labor Required

OTHER:

- 1. Labor is required for any and all electrical work over and above the installation of the main power drop. Please see the Electrical Labor form for complete details. Please complete the labor order form.
- 2. Dismantle labor will be automatically charged at 50% of the installation time and rounded to the nearest half hour.
- 3. All material and equipment provided by Freeman is for rental purposes only and remains the property of Freeman . All equipment will be removed at the close of the show by Freeman.
- 4. All equipment regardless of power source, must comply with Federal, State and local codes as well as any applicable local recognized electrical authorities and standards. Freeman reserves the right to inspect all electrical devices and connections to ensure compliance with all codes and proper permitting. Freeman is required to refuse connections where the exhibitor wiring is not in accordance with local electrical code and permitting.
- 5. Standard wall and other permanent building utility outlets or sockets are not part of booth space and may not be used by exhibitors unless electrical services have been ordered.
- 6. Exhibitors' cords must be a minimum of 14 gauge 3 wire with ground and must be flat when used for floorwork. All multi-outlet devices (eg power strips) must have circuit protection. All exposed non-current carrying metal parts of fixed equipment, which are liable to be energized, shall be grounded.
- 7. Exhibitor' equipment will be modified to conform to Freeman receptacles. If an outage is the result of an exhibitors' equipment, then a labor charge may be assessed. Labor and materials to install or change a cord cap or fix an outage will be billed on a time and material basis
- 8. Exhibitors with hardwall displays must arrange for power to be installed inside the booth or provide access.
- 9. Power sharing is not permitted between exhibitors.
- 10. Fire code requires a 9" minimum access space for electrical equipment at the back of all booths with a hard back wall. Storage of any materials is not allowed in this space.